

 
ROTORRAKE



# ROBUST SINGLE-SHAFT COARSE MACERATOR

## ROTORRAKE

*The Rotorrake tackles macerating tasks where others have failed – for macerating very coarse solids and rags. Depending on the application, the single-shaft macerator is available with or without foreign body separator.*

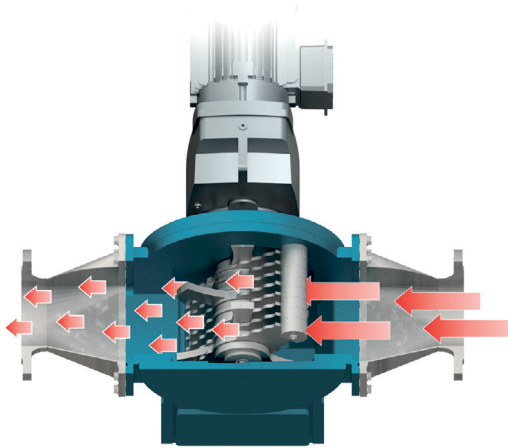


### OPERATING PRINCIPLE

The solids containing liquids flow through the stationary counter blades which are arranged at an angle. The solids are captured by the counter blades and shredded by the cutting action of the rotating blades. The reduced solids then continue to flow suspended in the liquid.

Rotorrake	Max. flow rate	Standard version max. pressure	Reinforced version max. pressure
<b>RR 6000</b>	360 m³/h (1586 gpm)	2 bar (29 psi)	5 bar (72,5 psi)
<b>RR 9000</b>	540 m³/h (2379 gpm)	2 bar (29 psi)	5 bar (72,5 psi)

### CONSTRUCTION AND FUNCTION

 - 1 The quick-release cover**  
Access to all wetted parts through the quick-release cover – maintenance without removal of pipe or drive systems (MIP).
- 2 The blades and counter blades**  
Blades and counter blades are assembled alternately on the carrier shaft. The blades are moved by the rotating shaft. The stationary counter blades are locked into the casing.
- 3 The foreign body separator**  
Solids that cannot be macerated are collected in the foreign body separator (with drainage device at the side).

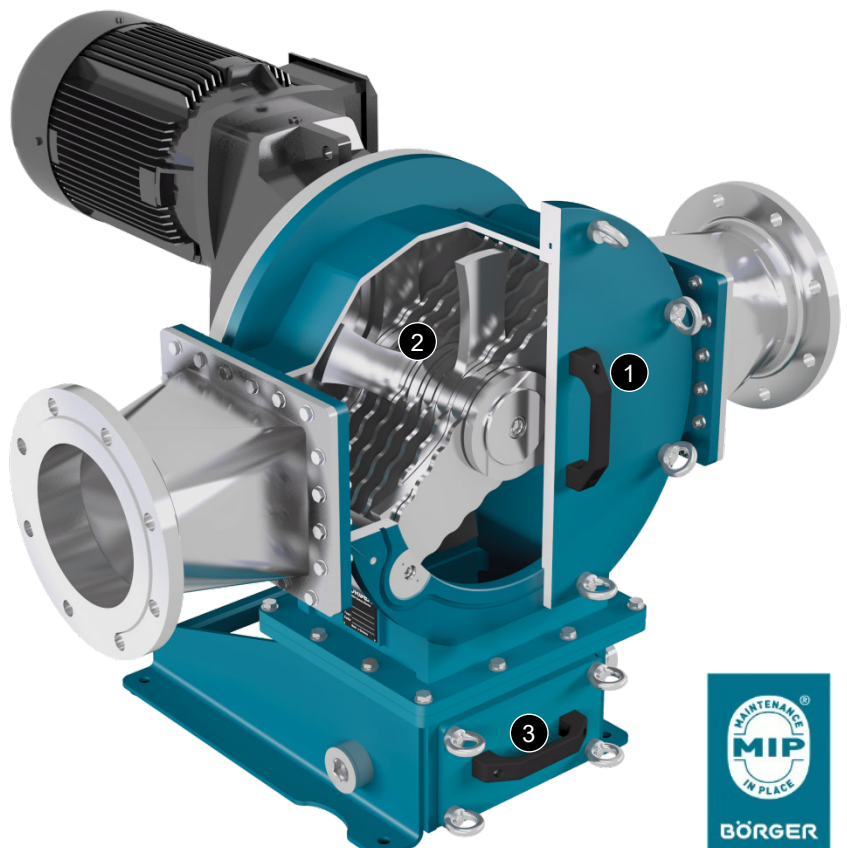


## ROTORRAKE AT A GLANCE

- + Effective coarse macerator
- + High resistance to wear due to no-contact arrangement of blades and counter blades
- + Blades and counter blades can be turned round to use on both sides
- + Available in stainless steel
- + Various drive options
- + Energy efficient


## FLEXIBLE INSTALLATION

 The Rotorrake offers high flexibility for the installation. The flow direction can be changed subsequently (please find a small selection of options here).

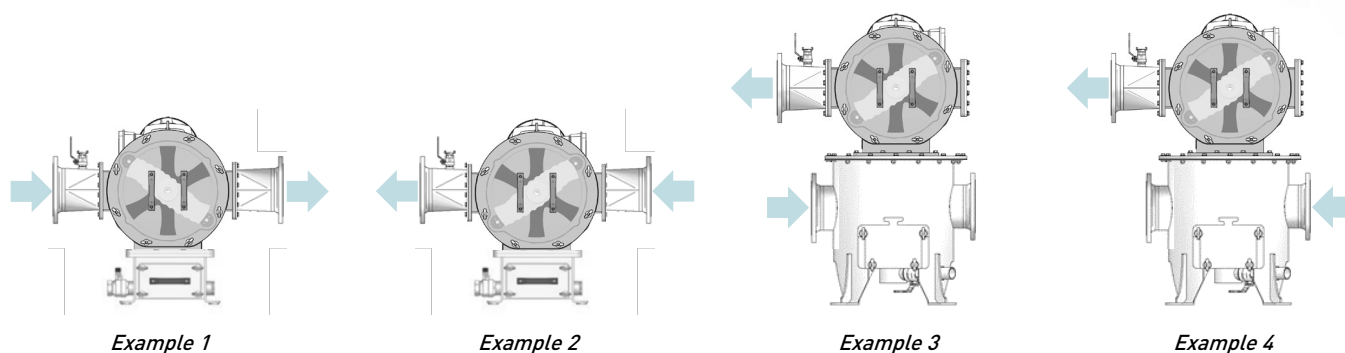


## WITH OR WITHOUT FOREIGN BODY SEPARATOR

 
Depending on the application, the Rotorrake is installed with or without foreign body separator (16 l or 150 l). When operating conditions change, the foreign body separator can be retrofitted, replaced or removed.

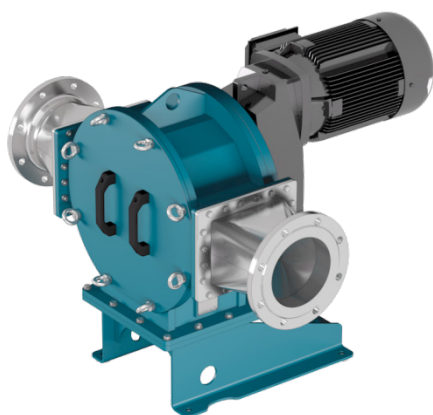

 **Rotorrake pure**  
Without foreign body separator

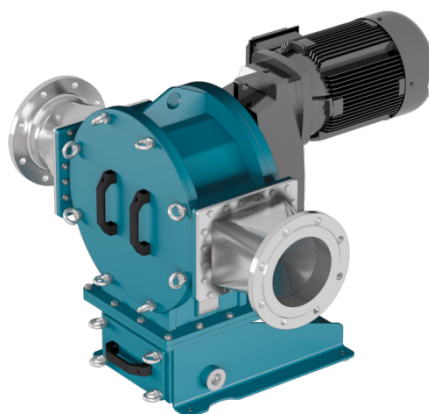

 **Rotorrake plus 16**  
With 16 l foreign body separator

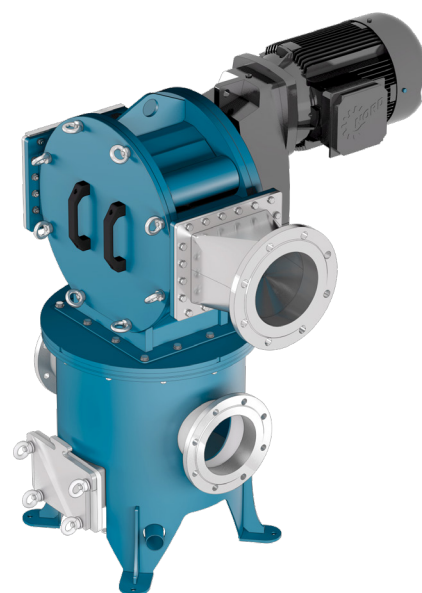

**Rotorrake plus 150**  
With 150 l foreign body separator



# BÖRGER®

EXCELLENCE – MADE TO LAST



**Börger GmbH**  
Borken-Weseke, Germany  
Phone +49 2862 9103-0  
[info@boerger.de](mailto:info@boerger.de)

**Börger Benelux**  
Ootmarsum, Netherlands  
[info@boerger-pumps.nl](mailto:info@boerger-pumps.nl)

**Boerger LLC**  
Chanhassen, MN, USA  
[america@boerger.com](mailto:america@boerger.com)

**Börger France Sarl**  
Wittersheim, France  
[info@borger.fr](mailto:info@borger.fr)

**Boerger Polska Sp. z o.o.**  
Gliwice, Poland  
[info@boerger.pl](mailto:info@boerger.pl)

**Börger UK Ltd.**  
Staffordshire, United Kingdom  
[uk@boerger.com](mailto:uk@boerger.com)

**Boerger Pumps Asia Pte Ltd**  
Singapore  
[asia@boerger.com](mailto:asia@boerger.com)

**Boerger Pumps Asia Pte Ltd**  
Gurugram, Haryana, India  
[india@boerger.com](mailto:india@boerger.com)

**Boerger Pumps (Shanghai) Co., Ltd.**  
Pudong, Shanghai, China  
[shanghai@boerger.com](mailto:shanghai@boerger.com)

**000 Börgers Pumps**  
Moscow, Russia  
[russia@boerger.com](mailto:russia@boerger.com)

[www.boerger.com](http://www.boerger.com)

## lobe

**Danmark**  
Lobe ApS  
Tlf. +45 7684 3484  
Mail: [sales@lobe.dk](mailto:sales@lobe.dk)  
[www.lobe.dk](http://www.lobe.dk)

**Norge**  
Lobe AS  
Tlf. +47 6710 5000  
Mail: [sales@lobe.no](mailto:sales@lobe.no)  
[www.lobe.no](http://www.lobe.no)

P37\_03\_2022